
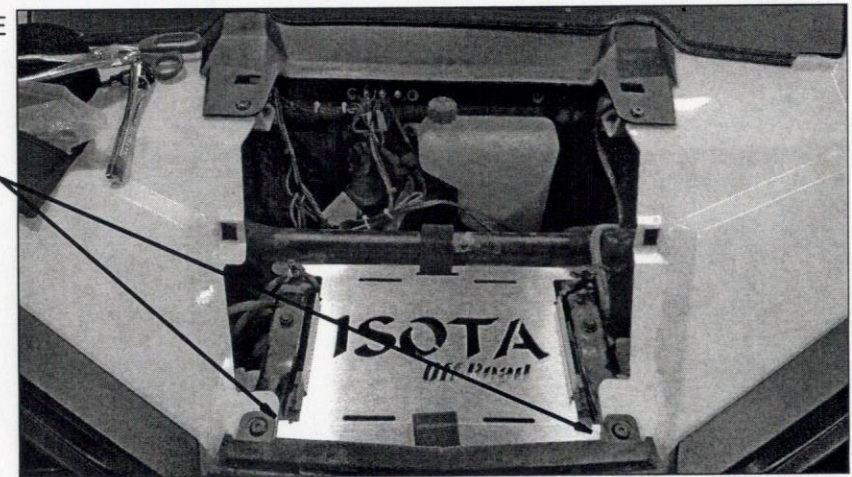


UNDER HOOD DRY STORAGE INSTRUCTIONS

1. REMOVE HOOD FROM MACHINE.
2. DISCONNECT ANTI-FREEZE OVERFLOW LINE FROM THE RADIATOR NECK AND FEED IT UNDER BOTH RADIATOR SUPPORT BRACKETS.
3. FEED THE FRONT DIFFERENTIAL VENT LINE UNDER THE RADIATOR SUPPORT BRACKET.
4. LOOSELY INSTALL A ZIP TIE AROUND BOTH RADIATOR SUPPORT BRACKETS TO HOLD THE LINES TO EACH BRACKET. (BE CAREFUL NOT TO INSTALL THE ZIP TIES TOO TIGHT)
5. REMOVE THE TWO HEX HEAD BOLTS AND THE TWO TORX BOLTS.
6. SLIDE YOUR ISOTA BRACKET AS PICTURED INTO POSITION OVER THE BOLT HOLES AND INSTALL THE HEX AND TORX BOLTS. (FOR THE TORX SCREWS INSERT THE ISOTA BRACKET BETWEEN THE COLORED FRONT PLASTIC AND METAL RADIATOR SUPPORT BRACKET ON MACHINE.) *BE SURE TO LEAVE THE VELCRO ATTACHED TO THE DRY STORAGE BRACKET FOR INSTALLATION.
7. FILL YOUR DRY STORAGE BOX WITH APPROPRIATE ITEMS AND PLACE IT ON THE ISOTA BRACKET. SECURE IT BY ATTACHING THE TWO VELCRO ENDS TOGETHER.
8. INSTALL YOUR HOOD AND YOU ARE READY TO RIDE.

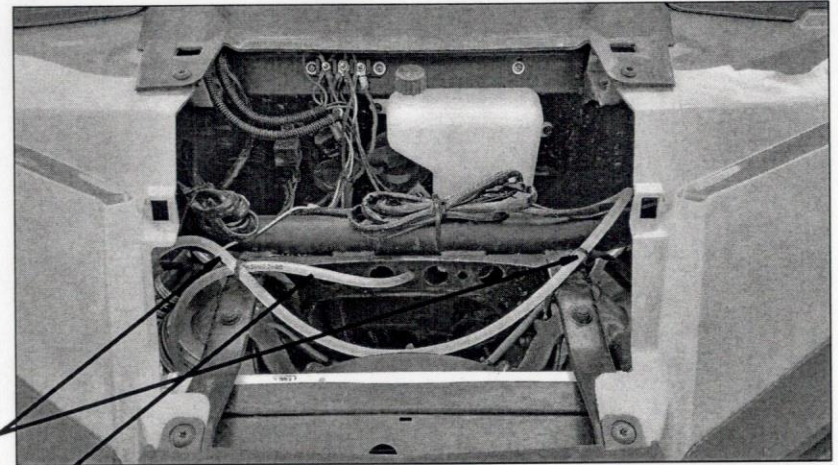

WWW.ISOTALLC.COM PH: 505-404-9363